




## ICE™-5100/252 In-Circuit Emulator for the MCS®-51 Family of Microcontrollers

- Precise, Full-Speed, Real-Time Emulation of Selected MCS-51 Microcontroller Components at Speeds Up to and Including 16 MHz
- 64 KB of Mappable High-Speed Emulation Memory
- 254 24-Bit Frames of Trace Memory (16 Bits Trace Program Execution Addresses and 8 Bits Trace External Events)
- Serial Link to the IBM\* PC AT, PC XT (and DOS Compatibles), and the Intellec® Series III/IV
- ASM-51 and PL/M-51 Language Support
- Symbolic Debugging Enables Access to Memory Locations and Program Variables
- Four Address Breakpoints with In-Range, Out-Of-Range, and Page Breaks
- Equipped with the Integrated Command Directory (ICD™) that Includes:
  - On-Line Help
  - Syntax Guidance and Checking
  - Dynamic Command-Entry
  - Error Checking
  - Command Recall
- On-Line Disassembler and Single-Line Assembler to Help with Code Patching
- Built-In CRT-Oriented Text Editor

The ICE™-5100/252 in-circuit emulator is a high-level, interactive debugging system that is used to develop and test the hardware and software of a target system based on the MCS®-51 family of microcontrollers. The ICE-5100/252 emulator can be serially linked to an IBM PC AT or PC XT, or an Intellec Series III/IV. The emulator can communicate with the host system at standard baud rates up to 19.2K. The design of the emulator supports selected MCS-51 microcontroller components at speeds up to and including 16 MHz.

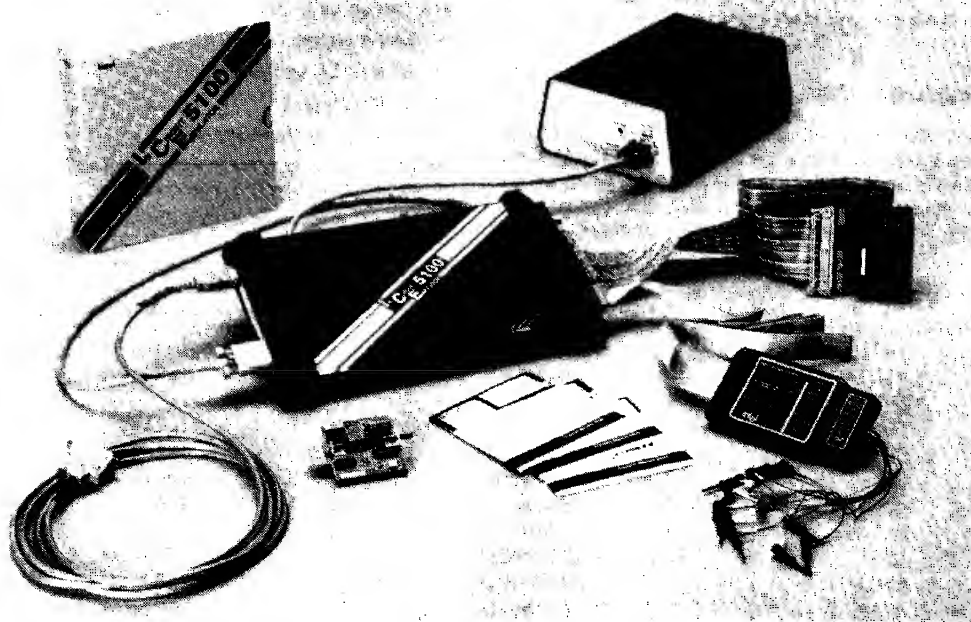

\*IBM is a registered trademark of International Business Machines Corporation.

280200-1

## PRODUCT OVERVIEW

*The ICE-5100/252 emulator provides full emulation*

support for the MCS®-51 family members listed in Table 1.

The ICE-5100/252 emulator enables hardware and software development to proceed simultaneously. With the ICE-5100/252 emulator, prototype hardware can be added to the system as it is designed and software can be developed prior to the completion of the hardware prototype. Software and hardware integration can occur while the product is being developed.

The ICE-5100/252 emulator assists four stages of development:

- Software debugging
- Hardware debugging
- System integration
- System test

### Software Debugging

The ICE-5100/252 emulator can be operated without being connected to the target system or before any of the user's hardware is available (provided external data RAM is not needed). In this stand-alone mode, the ICE-5100/252 emulator can be used to facilitate program development.

### Hardware Debugging

The ICE-5100/252 emulator's AC/DC parametric characteristics match the microcontroller's. The emulator's full-speed operation makes it a valuable tool for debugging hardware, including time-critical serial port, timer, and external interrupt interfaces.

## System Integration

*Integration of software and hardware can begin*

when the emulator is plugged into the microcontroller socket of the prototype system hardware. Hardware can be added, modified, and tested immediately. As each section of the user's hardware is completed, it can be added to the prototype. Thus, the hardware and software can be system tested in real-time operation as each section becomes available.

## System Test

When the prototype is complete, it is tested with the final version of the system software. The ICE-5100/252 emulator is then used for real-time emulation of the microcontroller to debug the system as a completed unit.

The final product verification test can be performed using the ROM or EPROM version of the microcontroller. Thus, the ICE-5100/252 emulator provides the ability to debug a prototype or production system at any stage in its development without introducing extraneous hardware or software test tools.

## PHYSICAL DESCRIPTION

The ICE-5100/252 emulator consists of the following components (see Figure 1):

- Power supply
- AC and DC power cables
- Controller pod
- Serial cable (host-specific)
- User probe assembly (consisting of the processor module and the user cable)
- Crystal power accessory (CPA)

**Table 1. MCS®-51 Family Support Offered by the ICETM-5100/252 Emulator**

Part	On-Chip Program Memory	On-Chip Data Memory
8031	None	128 bytes
80C31	None	128 bytes
8032	None	256 bytes
8051	4 KB-ROM	128 bytes
80C51	4 KB-ROM	128 bytes
8052	8 KB-ROM	256 bytes
80C252	None	256 bytes
83C252	8 KB-ROM	256 bytes
8751	4 KB-EPROM	128 bytes
87C51	4 KB-EPROM	128 bytes
8752	8 KB-EPROM	256 bytes
87C252	8 KB-EPROM	256 bytes

- 40-pin DIP target adaptor
- Clips assembly
- Software (includes the ICE-5100/252 emulator software, diagnostic software, and tutorial)

The controller pod contains 64 KB of emulation memory, 254- by 24-bit frames of trace memory, and the control processor. In addition, the controller pod houses a BNC connector that can be used to connect up to 10 multi-ICE compatible emulators together for synchronous starting and stopping of emulation.

The serial cable connects the host system to the controller pod. The serial cable supports a subset of the RS-232C signals.

The user probe assembly consists of a user cable and a processor module. The processor module houses the emulation processor and the interface logic. The target adaptor connects to the processor module and provides an electrical and mechanical interface to the target microcontroller socket.

The crystal power accessory (CPA) is a small detachable board that connects to the controller pod and enables the ICE-5100/252 emulator to run in


stand-alone mode. The target adaptor plugs into the socket on the CPA; the CPA then supplies clock and power to the user probe.

The clips assembly enables the user to trace external events. Eight bits of data are gathered on the rising edge of PSEN during opcode fetches. The clips information can be displayed using the CLIPS option with the PRINT command. Trace qualification input and output lines are also provided on the clips pod for connection to test equipment.

The ICE-5100/252 emulator software supports mnemonics, object file formats, and symbolic references generated by Intel's ASM-51 and PL/M-51 programming languages. Along with the ICE-5100/252 emulator software is a customer confidence test disk with diagnostic routines that check the operation of the hardware.

The on-line tutorial is written in the ICE-5100 command language. Thus, the user is able to interact with and use the ICE-5100/252 emulator while executing the tutorial.

A comprehensive set of documentation is included with the ICE-5100/252 emulator.

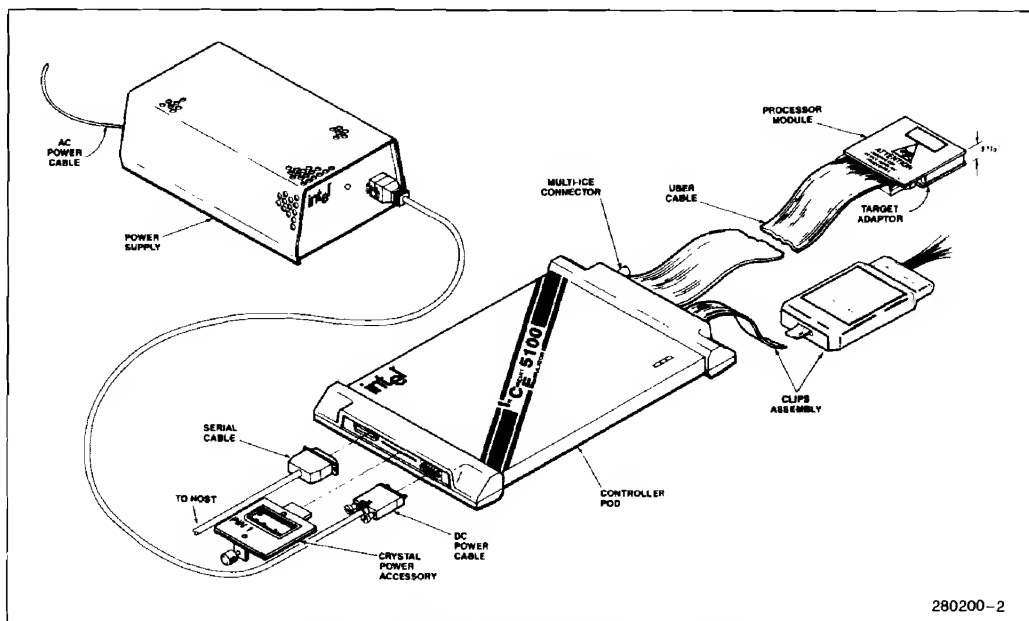

**Figure 1. The ICE™-5100/252 System Hardware**

## ICETM-5100/252 EMULATOR FEATURES

ICE-5100/252 emulator commands that access memory use one of the special prefixes (e.g., CODE) to specify the memory space.

The ICE-5100/252 emulator has been created to assist a product designer in developing, debugging, and testing designs incorporating the MCS®-51 family of microcontrollers. The following sections detail some of the ICE-5100/252 emulator features.

### Processor Selection

The ICE-5100/252 emulator emulates the microcontrollers listed in Table 1. Selecting a processor type changes the following characteristics to match the microcontroller selected:

- Internal RAM size
- Internal ROM size
- Idle and power down mode enable
- Special function register symbolic map
- Memory map
- Latched or unlatched  $\overline{EA}$
- Serial port framing and error detection

### Emulation

Emulation is the controlled execution of the user's software in the target hardware or in an artificial hardware environment that duplicates the microcontroller of the target system. Emulation is a transparent process that happens in real-time. The execution of the user software is facilitated with the ICE-5100/252 command language.

### Memory Mapping

There is 64 KB of memory that can be mapped to the CODE memory space in 4 KB blocks on 4 KB boundaries. By mapping memory to the ICE-5100/252 emulator, software development can proceed before the user hardware is available.

### Memory Examination and Modification

The memory space for the MCS®-51 component(s) and its target hardware is fully accessible through the emulator. The ICE-5100/252 emulator refers to four physically distinct memory spaces, as follows:

- CODE — references program memory
- IDATA — references internal data memory
- RDATA — references special function register memory
- XDATA — references external data memory

The microcontroller's special function registers and register bits can be accessed mnemonically (e.g., DPL, TCON, CY) with the ICE-5100/252 emulator software.

Data can be displayed or modified in one of three bases: hexadecimal, decimal, and binary. Data can also be displayed or modified in one of two formats: ASCII and unsigned integer. Program code can be disassembled and displayed as ASM-51 assembler mnemonics. Code can be modified with standard ASM-51 statements using the built-in single-line assembler.

Symbolic references can be used to specify memory locations. A symbolic reference is a procedure name, line number, program variable, or label in the user program that corresponds to a location.

Some typical symbolic functions include:

- Changing or inspecting the value of a program variable by using the symbolic name to access the memory location.
- Defining break and trace events using symbolic references.
- Referencing variables as primitive data types. The primitive data types are ADDRESS, BIT, BOOLEAN, BYTE, CHAR (character), and WORD.

The ICE-5100/252 emulator maintains a virtual symbol table (VST) for program symbols. A maximum of 61 KB of host memory space is available for the VST. If the VST is larger than 61 KB, the excess is stored on available host system disk space and is paged in and out as needed. The size of the VST is limited only by the disk capacity of the host system.

### Breakpoint Specifications

Breakpoints are used to halt a user program in order to examine the effect of the program's execution on the target system. The ICE-5100/252 emulator supports three different types of break specifications:

- Specific address break — A single address can be specified to halt emulation.

- Range break — An arbitrary range of addresses can be specified to halt emulation. Program execution within or, optionally, outside the range halts emulation.
- Page break — Up to 256 page breaks can be specified. A page break is defined as a range of addresses that is 256-bytes long and begins on a 256-byte address boundary.

Break registers are user-defined debug definitions used to create and store breakpoint definitions. Break registers can contain multiple breakpoint definitions and can optionally call debug procedures when emulation halts.

## Trace Specifications

Tracing can be triggered using specifications similar to those used for breaking. Normally, the ICE-5100/252 emulator traces program activity while the user program is executing. With a trace specification, tracing can be triggered to occur only when specific conditions are met during execution. Up to 254 24-bit frames of trace information are collected in the buffer during emulation. Sixteen of the 24 bits trace instruction execution addresses, and 8 bits capture external events (CLIPS).

The trace buffer display is similar to an ASM-51 program listing shown in Figure 2. The PRINT command enables the user to selectively display the contents of the trace buffer. The user has the option of displaying the clips information as well as disassembled instructions.

## Procedures

Debugging procedures (PROCs) are a user-named group of ICE-5100/252 emulator commands that are executed as one command. PROCs enable the user to define several commands in a named block structure. The commands are executed by entering the name of the PROC. The PROC bodies are a simple DO...END construct.

PROCs can simulate missing hardware or software, collect debug information, and execute high-level software patches. PROCs can be copied to text files on disk, then recalled for use in later test sessions. PROCs can also serve as program diagnostics, implementing ICE-5100/252 emulator commands or user-defined definitions for special purposes. PROCs can also be used to set breakpoints.

## On-Line Syntax Menu

A special menu, called the Integrated Command Directory (ICD), similar to the one used for the I<sup>2</sup>CETM system and the VLSiCE-96 emulator, aids in creating syntactically correct command lines. Figure 3 shows an example of the ICD and how it changes to reflect the options available for the GO command.

## Help

The HELP command provides ICE-5100/252 emulation command assistance via the host system terminal. On-line HELP is available for the ICE-5100/252 emulator commands shown in Figure 4.

```

hlt>PRINT NEWEST 4      /* Print newest four instructions in
                        buffer */
FRAME      ADDRESS  CODE  INSTRUCTION
(028)      300A     C02A  PUSH  2AH
(030)      300C     2532  ADD   A,32H
(032)      300E     F52A  MOV   2AH,A
(034)      3010     B53210 CJNE  A,32H,*+10H
hlt>
hlt>PRINT CLIPS OLDEST 2 /* Buffer display showing clips */
FRAME      ADDRESS  CODE  INSTRUCTION      CLIPS (76543210)
(000)      300A     C02A  PUSH  2AH           01110011
(001)      300C     2532  ADD   A,32H          11110101
hlt>

```

280200-3


Figure 2. Selected Trace Buffer Displays

## Design Considerations


The height of the processor module and the target adaptor need to be considered for target systems.

Allow at least 1-1/2 inches (3.8 cm) of space to fit the processor module and target adaptor. Figure 5

shows the dimensions of the processor module.

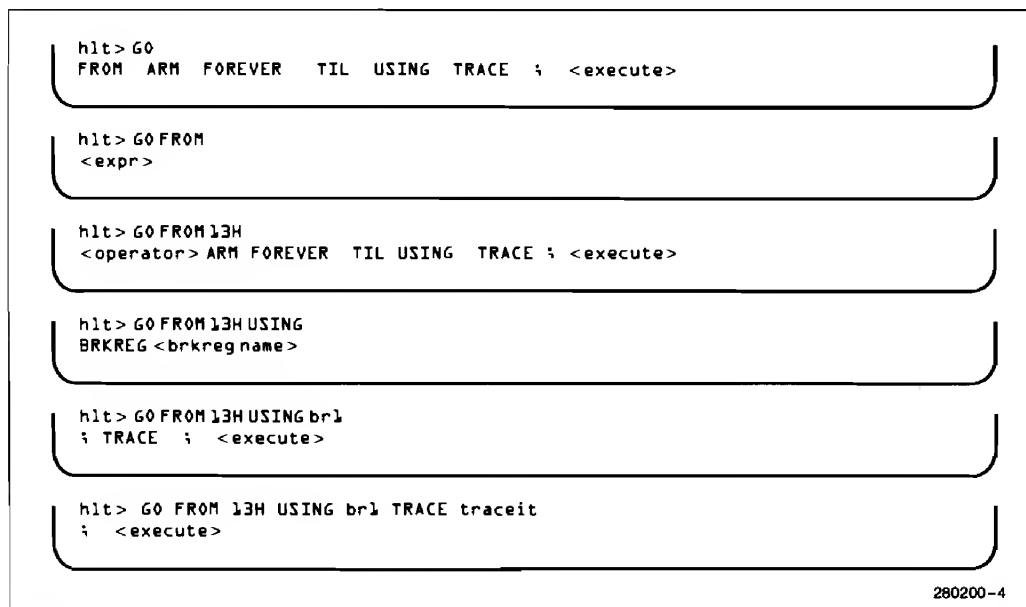

**Figure 3. The Integrated Command Directory for the GO Command**

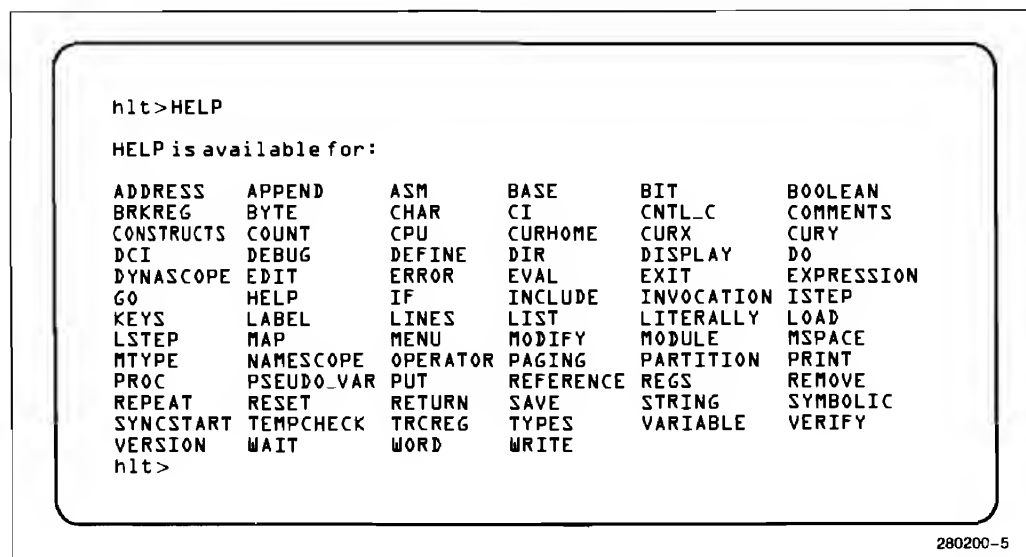

**Figure 4. HELP Menu**

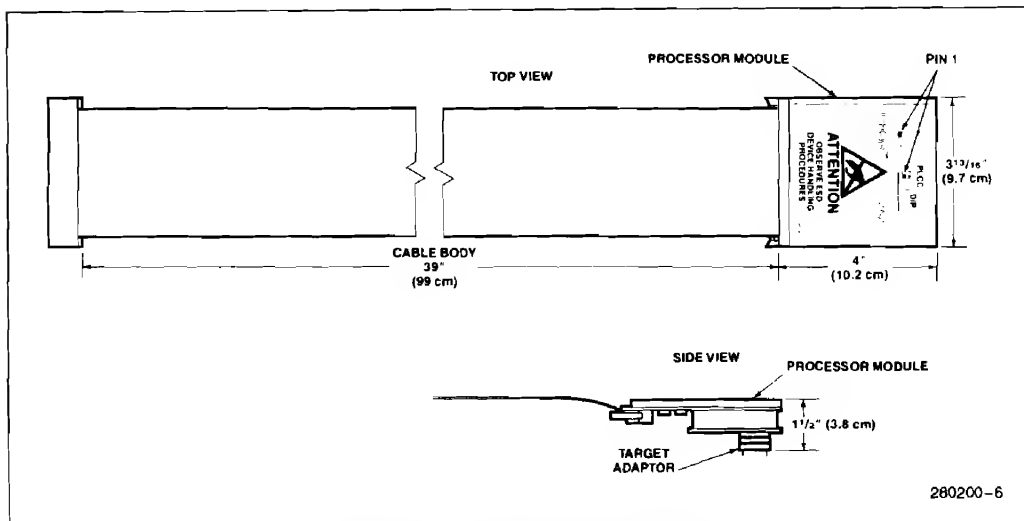


Figure 5. Processor Module Dimensions

## ELECTRICAL CONSIDERATIONS

The emulation processor's user-pin timings and loadings are identical to the 80C252 component except as follows.

### Maximum Operating ICC and Idle ICC (ma)\*

V <sub>CC</sub>	Maximum Operating ICC (ma)*			Maximum Idle ICC (ma)*		
	4V	5V	6V	4V	5V	6V
Frequency						
0.5 MHz	0.87	1.62	3.0	0.58	1.21	2.5
3.5 MHz	4.8	6.82	9.76	2.2	4.97	6.33
8.0 MHz	10.5	15.0	20.5	6.0	8.98	11.76
12.0 MHz	15.2	22.2	30.2	9.2	13.34	17.46
16.0 MHz	19.4	28.6	38.7	11.8	17.4	23.4

\* ICC is measured with all output pins disconnected.

XTAL1 driven with TCLCH, TCHCL = 10ns, V<sub>il</sub> = V<sub>SS</sub> + .5V, V<sub>ih</sub> = V<sub>CC</sub> - .5V. XTAL2 not connected.

For maximum operating ICC

E<sub>A</sub> = RST = Port0 = V<sub>CC</sub>.

For maximum idle ICC

\* E<sub>A</sub> = Port0 = V<sub>CC</sub>, RST = V<sub>CC</sub>, internal clock to PCA gated off.

- Up to 25 pf of additional pin capacitance is contributed by the processor module and target adaptor assemblies.
- Pin 31, E<sub>A</sub>, has approximately 32 pf of additional capacitance loading due to sensing circuitry.
- Pins 18 and 19, XTAL1 and XTAL2, respectively, have approximately 15 to 16 pf of additional capacitance when configured for crystal operation.

**Table 2. CHMOS and HMOS Design Differences**

Chip Function	HMOS Component 8031	CHMOS Component 80C31
RST trigger threshold	2.5V	70% V <sub>cc</sub> (3.5V @ V <sub>cc</sub> = 5V)
RST input impedance	4K – 10K ohms	50K – 150K ohms
Port I <sub>il</sub>	–800 μA	–50 μA
Clock threshold	2.5V	70% V <sub>cc</sub> (3.5V @ V <sub>cc</sub> = 5V)

## Emulating HMOS Components

The ICE-5100/252 emulator is based on a CHMOS emulation processor. There are minor differences between how the ICE-5100/252 emulator supports CHMOS and HMOS designs as shown in Table 2.

Refer to the *Microcontroller Handbook*, order number 210918, for further information on CHMOS and HMOS design considerations.

## HOST REQUIREMENTS

- IBM PC AT or PC XT (or PC-DOS compatible) with 512 KB of RAM and a hard disk running under the DOS 3.0 (or later) operating system.
- Intellec Series III/IV Microcomputer Development System running under the ISIS or iNDX operating system respectively, with at least 512 KB of application memory resident.

Disk drives — Dual floppy or one hard disk and one floppy drive required.

## ICETM-5100/252 SYSTEM SOFTWARE PACKAGE

- ICE-5100/252 emulator software
- ICE-5100/252 confidence tests
- ICE-5100/252 tutorial software

## EMULATOR PERFORMANCE

### Memory

Mappable full-speed emulation code memory	64 KB	Mappable to user or ICE-5100/252 emulator memory in 4 KB blocks on 4 KB boundaries.
---	-------	---

Trace Buffer	254- by 24- bit frames
--------------	------------------------

Virtual Symbol Table	A maximum of 61 KB of host memory space is available for the Virtual Symbol Table (VST). The rest of the VST resides on disk and is paged in and out as needed.
----------------------	---

## PHYSICAL CHARACTERISTICS

### Controller Pod

Width	8¼" (21 cm)
Height	1½" (3.8 cm)
Depth	13½" (34.3 cm)
Weight	4 lbs (1.85 kg)

### User Cable

The user cable is 3 feet (approximately 1 m).

### Processor Module

(with the target adaptor attached)

Width	3 <sup>13</sup> / <sub>16</sub> " (9.7 cm)
Length	1½" (3.8 cm)
Height	1½" (3.8 cm)



## Power Supply

Width 7<sup>5</sup>/<sub>8</sub>" (18.1 cm)  
 Height 4" (10.06 cm)  
 Depth 11" (27.97 cm)  
 Weight 15 lbs (6.1 kg)

## Serial Cable

The serial cable is 12 feet (3.6 m).

## ELECTRICAL CHARACTERISTICS

### Power Supply

100 - 120V or 200 - 240V (selectable)  
 50 - 60 Hz  
 2 amps (AC max) @ 120V  
 1 amp (AC max) @ 240V

### ENVIRONMENTAL CHARACTERISTICS

Operating temperature +10° C to +40°C (50°F to 104°F)  
 Operating humidity Maximum of 85% relative humidity, non-condensing

## ORDERING INFORMATION

### Emulator Hardware and Software

#### Order Code Description

pl252KITAD This kit contains: ICE-5100/252 user probe assembly, power supply and cables, serial cables, target adaptor, CPA, ICE-5100 controller pod, software, and documentation for use with an IBM PC AT or PC XT. The kit also includes the 8051 Software Development Package and the AEDIT text editor for use on DOS systems. [Requires software license.]

pl252KITD This kit is the same as the pl252KITAD kit excluding the 8051 Software Development Package and the AEDIT text editor. [Requires software license.]

pl252KITAS This kit contains the ICE-5100/252 user probe assembly, power supply and cables, serial cables, target adaptor, CPA, ICE-5100 controller pod, software, and documentation for use with Intel hosts (Series III, IV). The kit also includes the 8051 Software Development Package and the AEDIT text editor for use on Series III/IV. [Requires software license.]

pl252KITS This kit is the same as the pl252KITAS kit excluding the 8051 Software Development Package and the AEDIT text editor. [Requires software license.]

### Software Only

#### Order Code Description

pSA252D This kit contains the host, probe, diagnostic and tutorial software on 5<sup>1</sup>/<sub>4</sub>" disks for use on an IBM PC AT or PC XT (requires DOS 3.0 or later). [Requires software license.]

pSA252S This kit contains the host, probe, diagnostic and tutorial software on 8" disks (both single-density and double-density) for use on a Series III, and on 5<sup>1</sup>/<sub>4</sub>" disks for use on a Series IV. [Requires software license.]

### Other Useful Intel Debug and Development Support Products

#### Order Code Description

pD86ASM51 8051 Software Development Package (DOS version) — Consists of the ASM-51 macro assembler which gives symbolic access to 8051 hardware features; the RL51 linker and relocater program that links modules generated by ASM-51; CONV51 which enables software written for the MCS-48 family to be up-graded to run on the 8051, and the LIB51 Librarian which programmers can use to create and maintain libraries of software object modules. Use with the DOS operating system (version 3.0 or later).

pD86PLM51	PL/M-51 Software Package (DOS version) — Consists of the PL/M-51 compiler which provides high-level	pI86ASM51	8051 Software Development Package (ISIS version) — Same as the pD86ASM51 package except this one
	programming language support; the LIB51 utility that creates and maintains libraries of software object modules, and the RL51 linker and relocater program that links modules generated by ASM-51 and PL/M-51 and locates the linked object modules to absolute memory locations. Use the DOS operating system (version 3.0 or later).		is for use with the Series III.
		pI86PLM51	PL/M-51 Software Package — Same as the pD86PLM51 package except this one is for use with the Series III and Series IV.
		pD86EDIEU	AEDIT text editor for use with the DOS operating system.



## DOMESTIC SALES OFFICES

### ALABAMA

Intel Corp.  
5015 Bradford Drive  
Suite 2  
Huntsville 35825  
Tel (205) 830-4010

### ARIZONA

Intel Corp.  
11225 N. 28th Drive  
Suite 214D  
Phoenix 85029  
Tel (602) 869-4980

Intel Corp.  
1161 N. El Dorado Place  
Suite 301  
Tucson 85716  
Tel (602) 299-6815

### CALIFORNIA

Intel Corp.  
21515 Vanowen Street  
Suite 116  
Canoga Park 91303  
Tel (818) 704-8500

Intel Corp.  
2250 E. Imperial Highway  
Suite 218  
El Segundo 90245  
Tel (415) 640-6040

Intel Corp.  
1510 Arden Way Suite 101  
Sacramento 95815  
Tel (916) 920-8096

Intel Corp.  
4350 Executive Drive  
Suite 105  
San Diego 92121  
(619) 452-5880

Intel Corp.\*  
2000 East 4th Street  
Suite 100  
Santa Ana 92705  
Tel (714) 835-9642  
TWX 910-595-1114

Intel Corp.\*  
San Thomas 4  
2700 San Thomas Expressway  
Santa Clara, CA 95051  
Tel (408) 986-8086  
910-538-0255

### COLORADO

Intel Corp.  
3500 Mitchell Lane Suite 210  
Boulder 80301  
Tel (303) 442-8088

Intel Corp.  
4445 Northpark Drive  
Suite 100  
Colorado Springs 80907  
Tel (303) 594-6622

Intel Corp.\*  
650 S. Cherry Street  
Suite 915  
Denver 80222  
Tel (303) 321-8066  
TWX 910-931-2289

### CONNECTICUT

Intel Corp.  
26 Mill Plain Road  
Danbury 06810  
Tel (203) 748-3130  
TWX 710-456-1199

EMC Corp.  
222 Summer Street  
Stamford 06907  
Tel (203) 327-2934

### FLORIDA

Intel Corp.  
242 N. Westmonte Drive  
Suite 105  
Altamonte Springs 32714  
Tel (305) 869-5568

Intel Corp.  
6363 N.W. 6th Way Suite 100  
Ft. Lauderdale 33309  
Tel (305) 771-0600  
TWX 510-956-9407

### FLORIDA (Cont'd)

Intel Corp.  
11300 4th Street North  
Suite 170  
St. Petersburg 33702  
Tel (813) 577-2413

### GEORGIA

Intel Corp.  
3280 Ponce Parkway  
Suite 200  
Norcross 30092  
Tel (404) 449-0541

### ILLINOIS

Intel Corp.\*  
300 N. Mannheim Road Suite 400  
Schaumburg 60172  
Tel (312) 310-8011

### INDIANA

Intel Corp.  
8777 Purdue Road  
Suite 125  
Indianapolis 46268  
Tel (317) 875-0523

### IOWA

Intel Corp.  
St. Andrews Building  
1930 St. Andrews Drive N.E.  
Cedar Rapids 52402  
Tel (319) 393-5510

### KANSAS

Intel Corp.  
8400 W. 110th Street  
Suite 170  
Overland Park 66210  
Tel (913) 345-2727

### MARYLAND

Intel Corp.\*  
7321 Parkway Drive South  
Suite C  
Hanover 21076  
Tel (301) 796-7500  
TWX 710-862-1944

Intel Corp.  
7833 Walker Drive  
Greenbelt 20770  
Tel (301) 441-1020

### MASSACHUSETTS

Intel Corp.\*  
Westford Corp. Center  
3 Candis Road  
Westford 01886  
Tel (617) 652-3272  
TWX 710-343-6333

### MICHIGAN

Intel Corp.  
7071 Orchard Lake Road  
Suite 100  
West Bloomfield 48033  
Tel (313) 851-8096

### MINNESOTA

Intel Corp.  
3500 W. 80th Street  
Suite 360  
Bloomington 55431  
Tel (612) 855-9722  
TWX 910-576-2897

### MISSOURI

Intel Corp.  
4203 Earth City Expressway  
Suite 131  
Earth City 63045  
Tel (314) 291-1890

### NEW JERSEY

Intel Corp.\*  
Parkway 109 Office Center  
328 Newman Springs Road  
Red Bank 07701  
Tel (201) 747-2233

Intel Corp.  
75 Livingston Avenue  
First Floor  
Roseland 07068  
Tel (201) 740-0111

### NEW MEXICO

Intel Corp.  
8500 Menaul Boulevard N.E.  
Suite B-235  
Albuquerque 87112  
Tel (505) 292-8086

### NEW YORK

Intel Corp.\*  
300 Vanderbilt Motor Parkway  
Hempstead 11788  
Tel (516) 231-3300  
TWX 510-227-8236

Intel Corp.  
Suite 2B Hollowbrook Park  
15 Myers Corners Road  
Wappinger Falls 12590  
Tel (914) 297-6161  
TWX 510-248-0060

Intel Corp.\*  
211 White Spruce Boulevard  
Rochester 14623  
Tel (716) 424-1050  
TWX 510-253-7391

### NORTH CAROLINA

Intel Corp.  
5700 Executive Center Drive  
Suite 213  
Charlotte 28212  
Tel (704) 568-8956

Intel Corp.  
2700 Wycliff Road  
Suite 102  
Raleigh 27607  
Tel (919) 781-8022

### OHIO

Intel Corp.\*  
6500 Poe Avenue  
Dayton 45414  
Tel (513) 890-5350  
TWX 810-450-2528

Intel Corp.\*  
Chagrin-Brantford Bldg. No. 300  
26001 Chagrin Boulevard  
Cleveland 44122  
Tel (216) 484-2736  
TWX 810-427-9298

### OKLAHOMA

Intel Corp.  
8801 N. Broadway  
Suite 115  
Oklahoma City 73116  
Tel (405) 846-8086

### OREGON

Intel Corp.  
10700 S.W. Beaverlton  
Hillsdale Highway  
Suite 22  
Beaverlton 97005  
Tel (503) 641-8086  
TWX 910-467-8741

### PENNSYLVANIA

Intel Corp.  
1513 Center City Drive  
Camp Hill 17011  
Tel (717) 737-5035  
Intel Corp.\*  
455 Pennsylvania Avenue  
Fort Washington 19034  
Tel (215) 641-1000  
TWX 510-861-2077

Intel Corp.\*  
400 Penn. Center Boulevard  
Suite 610  
Pittsburgh 15235  
Tel (412) 623-4970

### PUERTO RICO

Intel Microprocessor Corp.  
South Industrial Park  
Las Piedras 00671  
Tel (609) 733-3030

### TEXAS

Intel Corp.  
313 E. Anderson Lane  
Suite 114  
Austin 78752  
Tel (512) 454-3628

### TEXAS (Cont'd)

Intel Corp.\*  
12300 Ford Road  
Suite 380  
Dallas 75234  
Tel (214) 241-6087  
TWX 910-860-5617

Intel Corp.\*  
7322 S.W. Freeway  
Suite 1490  
Houston 77074  
Tel (713) 988-8088  
TWX 910-861-2490

Industrial Digital Systems Corp.  
5925 Sovereign  
Suite 101  
Houston 77036  
Tel (713) 998-9421

### UTAH

Intel Corp.  
5201 Green Street  
Suite 280  
Murray 84123  
Tel (801) 263-6051

### VIRGINIA

Intel Corp.  
1603 Santa Rosa Road  
Suite 109  
Richmond 23288  
Tel (804) 282-5688

### WASHINGTON

Intel Corp.  
110 110th Avenue N.E.  
Suite 510  
Bellevue 98004  
Tel (206) 453-6086  
TWX 910-443-3002

Intel Corp.  
438 N. Mullian Road  
Suite 102  
Spokane 99206  
Tel (509) 928-8086

### WISCONSIN

Intel Corp.  
450 N. Sunnyslope Road  
Suite 130  
Chancellor Park  
Brookfield 53005  
Tel (414) 784-8087

## CANADA

### BRITISH COLUMBIA

Intel Semiconductor of Canada Ltd.  
301-2245 W. Broadway  
Vancouver V6K 2E4  
Tel (604) 738-6322

### ONTARIO

Intel Semiconductor of Canada Ltd.  
2550 Queensview Drive  
Suite 250  
Ottawa K1B 8H6  
Tel (813) 829-9714  
TELEX 053-4115  
Intel Semiconductor of Canada Ltd.  
190 Airwell Drive  
Suite 500  
Brampton M9W 6H8  
Tel (416) 675-2105  
TELEX 06983574

### QUEBEC

Intel Semiconductor of Canada Ltd.  
620 St. Jean Blvd.  
Pavle Clave H3R 3K3  
Tel (514) 694-9130  
TWX 514-694-9134

\*Field Application Location



INTEL CORPORATION, 3065 Bowers Avenue, Santa Clara, CA 95051; Tel. (408) 987-8080

INTEL CORPORATION (U.K.) Ltd., Swindon, United Kingdom; Tel. (0793) 696 000

INTEL JAPAN k.k., Ibaraki-ken; Tel. 029747-8511